


Pickup Box Endgate Latch Handle Kit Installation

[Installation Instructions Part Number](#)


23111905

[Procedure](#)


Remove Endgate Handle

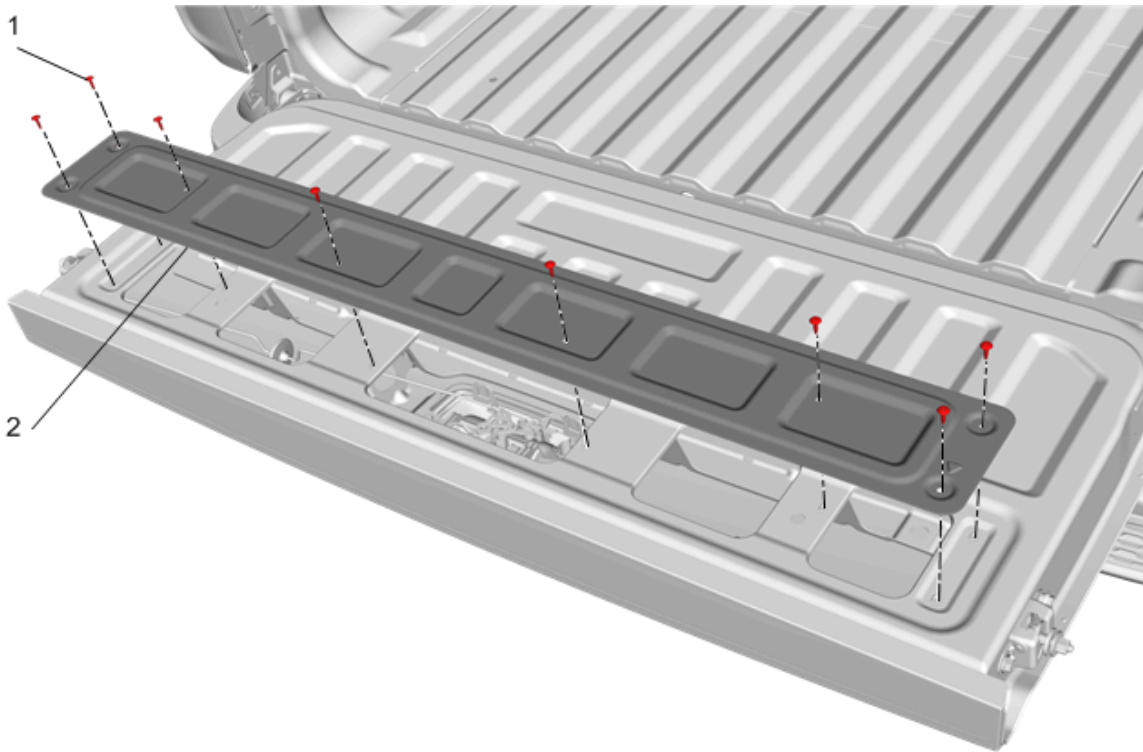


1. Open the endgate to the fully open position.
2. Remove the pickup box endgate access hole cover panel bolts (1) (Qty 8).
3. Remove the pickup box endgate access hole cover panel (2).

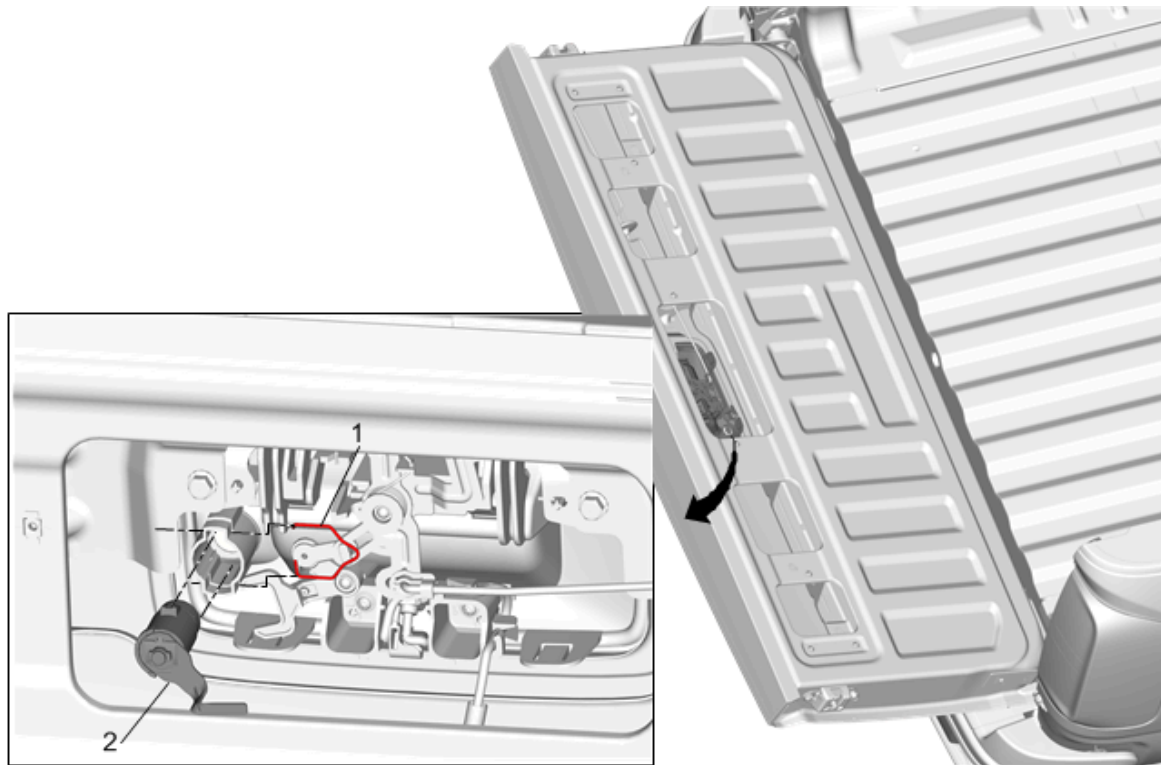

4. Remove and retain the endgate lock cylinder case spring retainer (1).
5. Remove and retain the endgate lock cylinder (2).

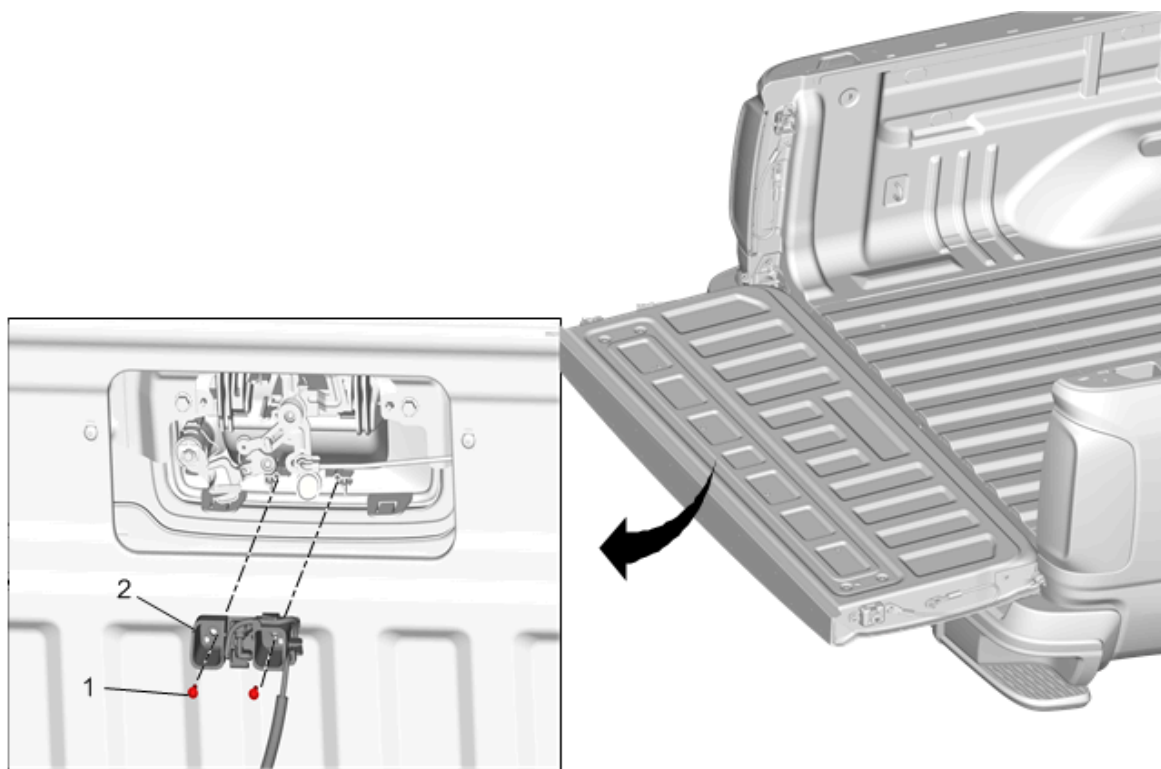


6. Remove the rearview driver information camera fasteners (1) (Qty 2).
7. Remove the driver information camera (2) by disconnecting the electrical connector.

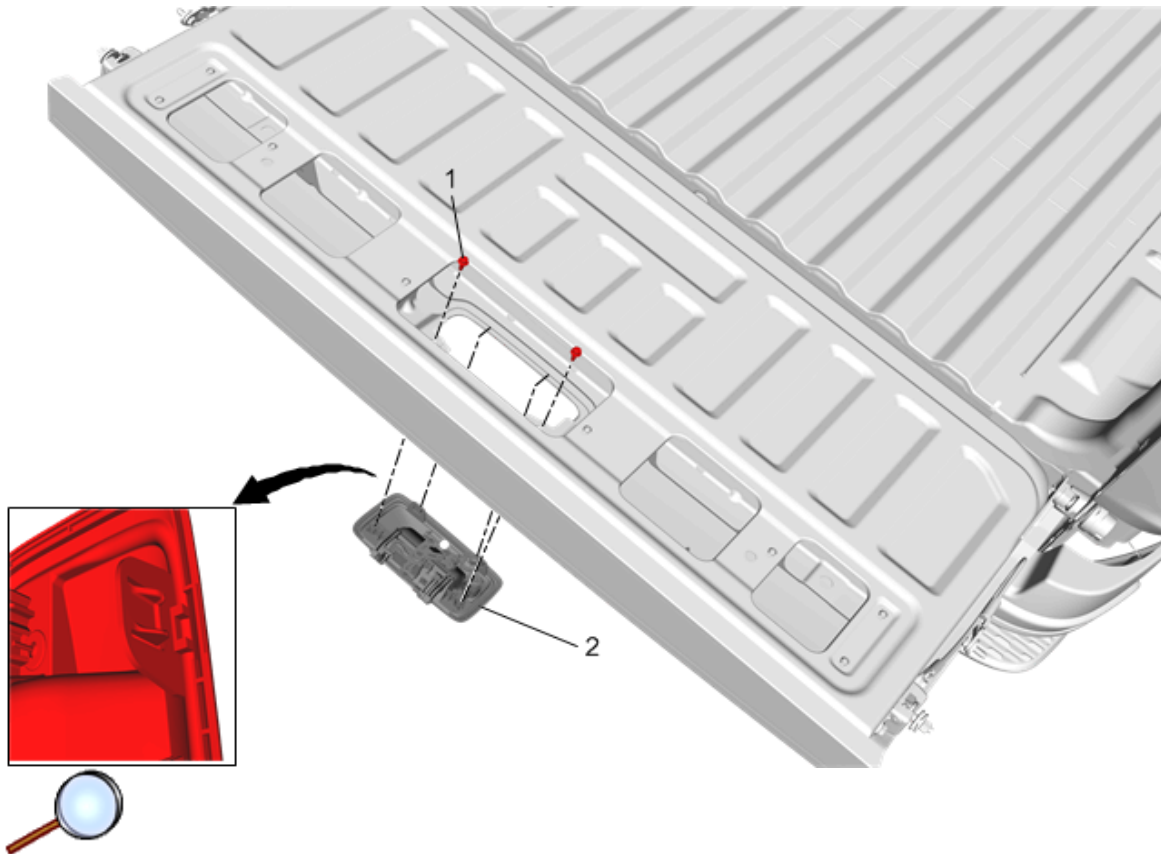

8. Remove the endgate handle bolts (1) (Qty 2).
9. Remove the endgate handle (2).
 - 9.1. Disconnect the actuator rods.
 - 9.2. Release the lower retainer tabs.


Install Accessory Endgate Handle

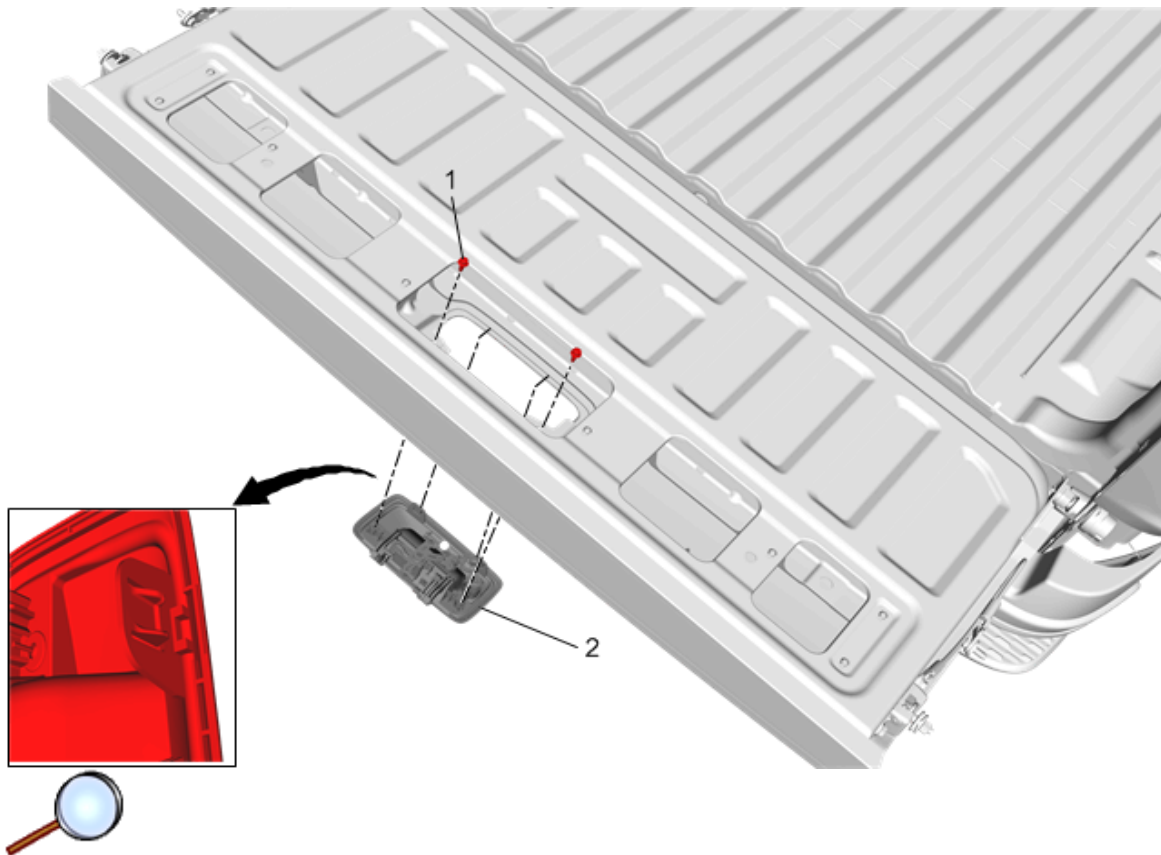


1. Connect the actuator rods.

Caution: Use the correct fastener in the correct location. Replacement fasteners must be the correct part number for that application. Fasteners requiring replacement or fasteners requiring the use of thread locking compound or sealant are identified in the service procedure. Do not use paints, lubricants, or corrosion inhibitors on fasteners or fastener joint surfaces unless specified. These coatings affect fastener torque and joint clamping force and may damage the fastener. Use the correct tightening sequence and specifications when installing fasteners in order to avoid damage to parts and systems.


2. Install the accessory endgate handle (2) and tighten the fasteners (1) to 9 N.m (80 lb in).

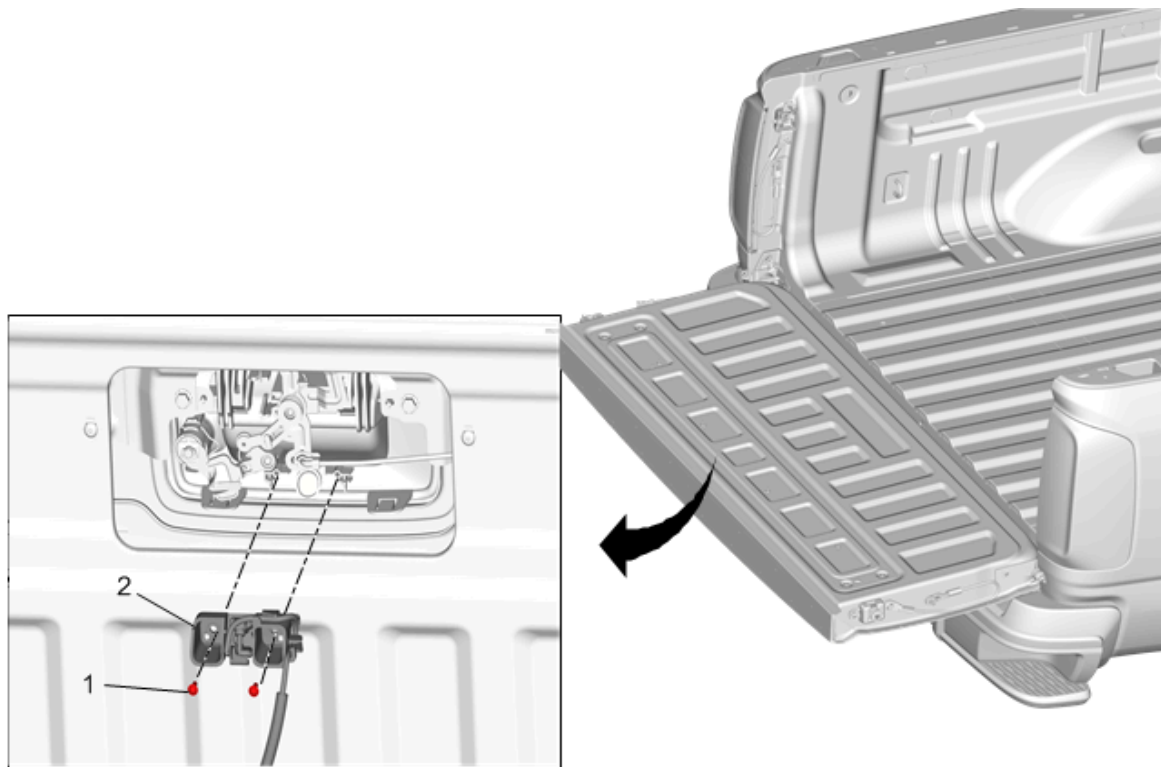

3. Install the rearview driver information camera (2) and connect the electrical connector.
4. Install the driver information camera fasteners (1) and tighten to 1 N.m (9 lb in).

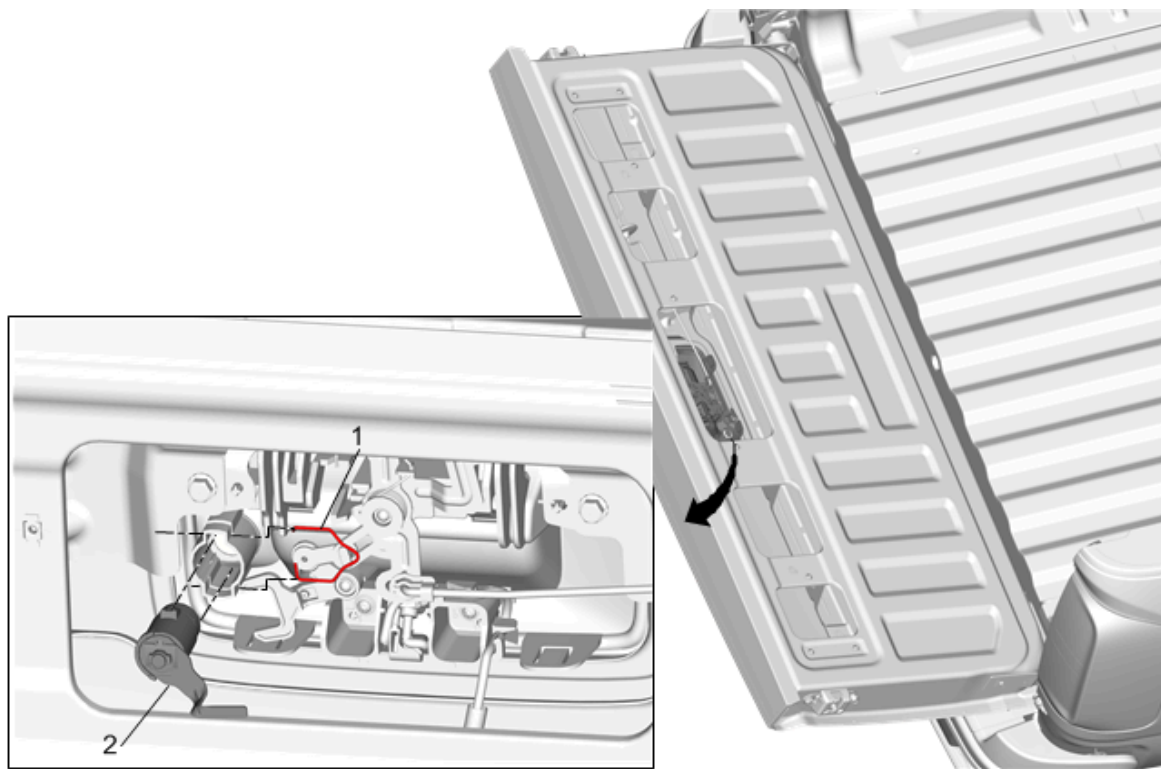

5. Install the endgate lock cylinder (2) to the accessory endgate handle.
6. Install the endgate lock cylinder case spring retainer (1).

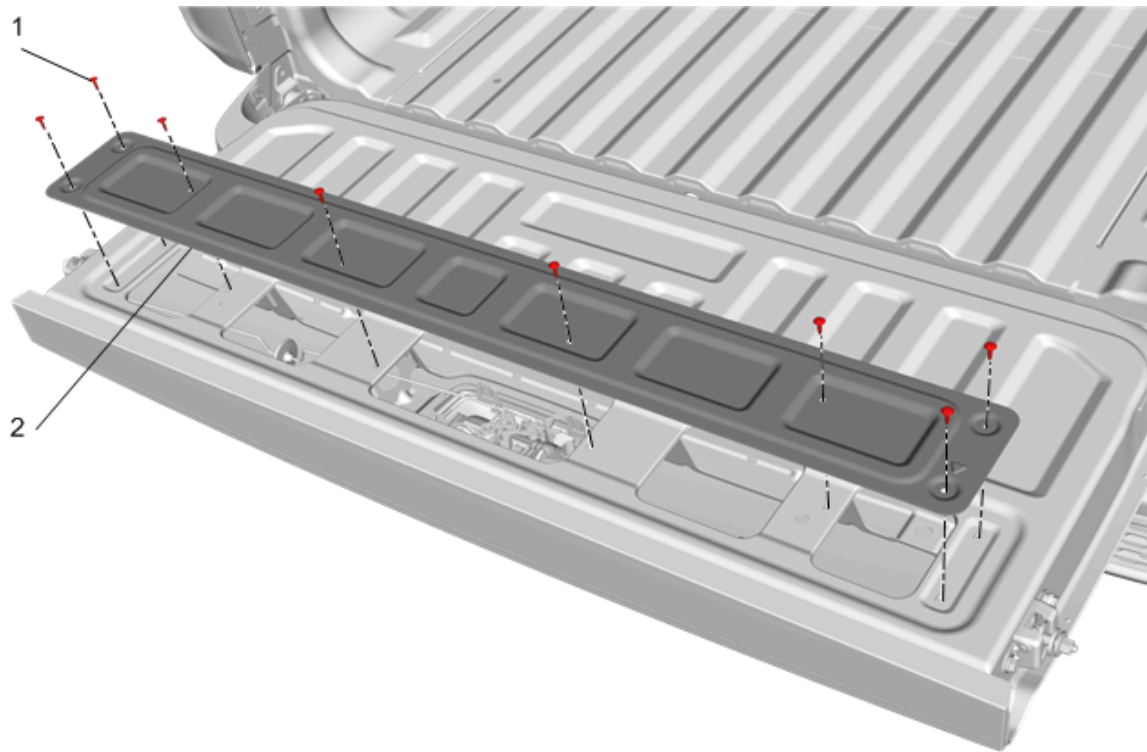

Note: Before installing the pickup box endgate access hole cover, make sure the accessory endgate handle functions correctly.

7. Install the pickup box endgate access hole cover panel (2).
8. Install the pickup box endgate access hole cover panel bolts (1) and tighten to 2.5 N.m (22 lb in)..
9. Close the pickup box endgate