


Document ID: 3816305

Hood Air Deflector Package Installation (Instruction P/N 23177945)

Installation Instructions Part Number

23177945

Kit Contents

Qty	Description
1	Hood Deflector
4	Abrasive Resistant Tape
1	Alcohol Prep Pad
1	Instructions

Tools Required


Clean Soft Cloth

Caution: Do not use abrasive, spirit or solvent-based cleaners.


Procedure




1. Read instructions thoroughly before commencing fitment. Wash and dry the vehicle.

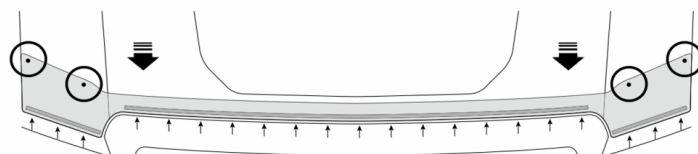

2. Trial fit the Hood Deflector centrally onto the hood, aligning the front lip of the Hood Deflector with the front lip of the hood. With a non-permanent marker, note and mark the positions of the four bumpers attached to the Hood Deflector and where they correspond to the hood. Also note the positions on the hood that correspond to the double sided tape on the Hood Deflector. Remove Hood Deflector.

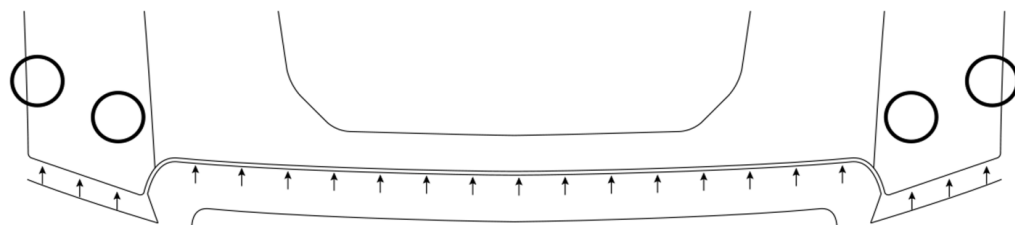


3. Clean the noted areas with the alcohol prep pad provided. Wipe off any residue with a dry clean cloth. At the four noted bumper locations adhere the abrasive resistant tape strips to the top of the hood.

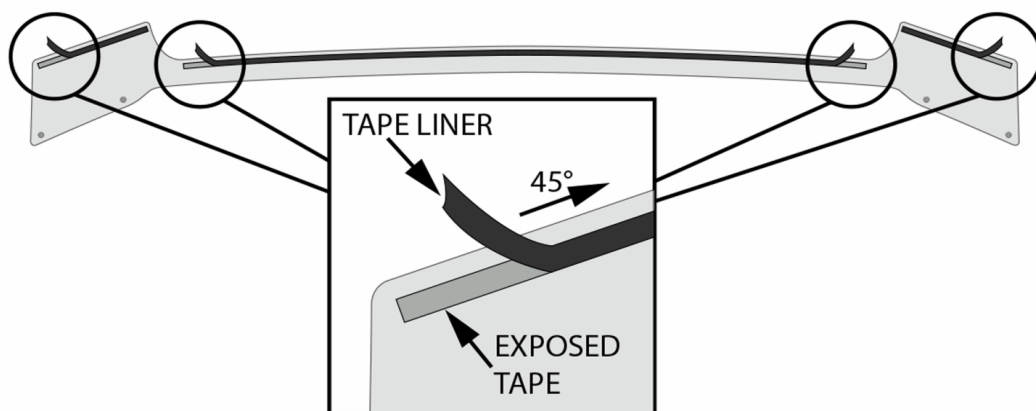

4. Peel back approximately 50mm (2") of the protective tape liner on the backing tape from each of the tape sections and fold the protective liner at 45° to the outside of the Hood Deflector, as shown.

Important: DO NOT TOUCH THE EXPOSED SURFACE OF THE BACKING TAPE.

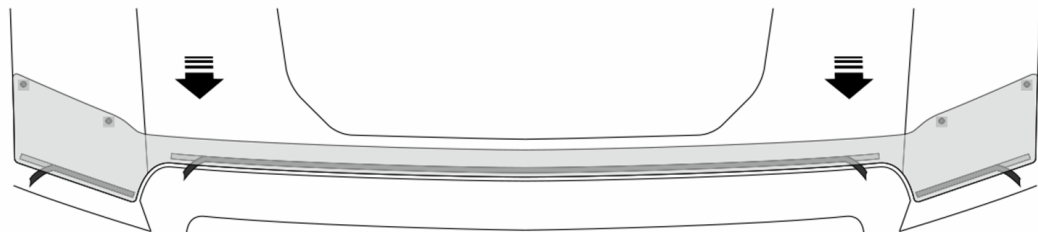


Note: Read this entire installation step before proceeding. Once the protective liner is removed from the tape and the exposed adhesive is in contact with the painted surface, repositioning of the deflector will not be possible.

5. Position the Hood Deflector onto the hood ensuring it is centered and aligned. Lightly press down on the exposed adhesive areas, this will temporarily hold the deflector in place.

Check alignment to the outer edges of the hood and front grille. Slowly remove the remaining protective liner by pulling on the exposed ends making sure the position of the deflector does not change.

Apply firm pressure to all exposed adhesive areas.

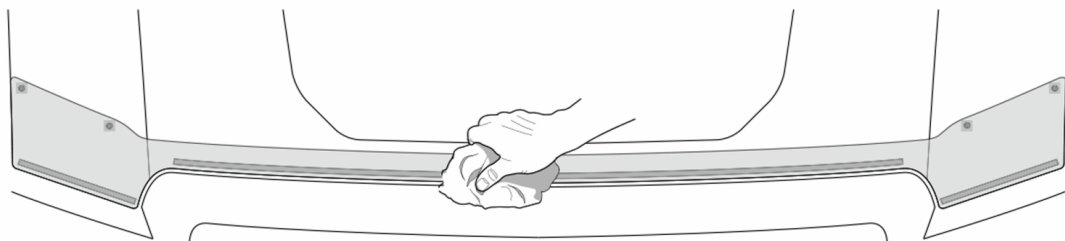

6. Using a clean, soft cloth, firmly rub down over the attachment areas 4 times to ensure maximum adhesion.