

Hood Air Scoop Package Installation


[Installation Instructions Part Number](#)

23451715

Kit Contents

Qty	Description
1	Hood Scoop
1	Installation Instructions


Removal Procedure

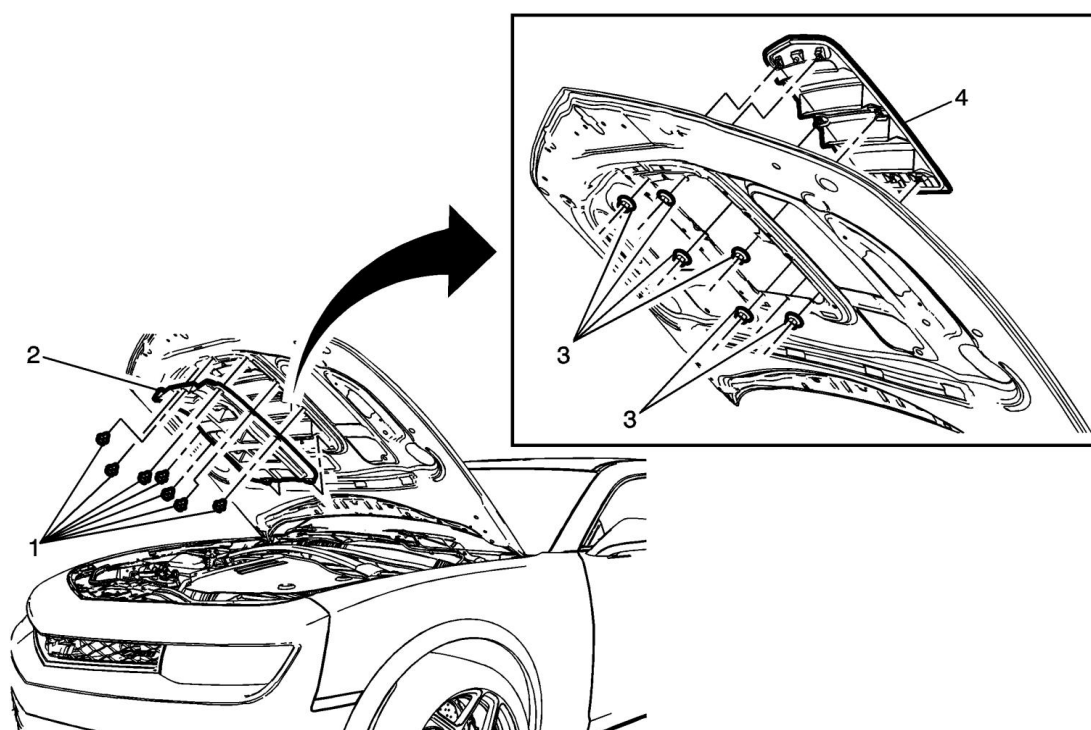

1. Open Hood.
2. Remove the hood air scoop deflector push-in retainers (1). Retain retainers for installation.
3. Remove hood air scoop deflector (2) from the underside of hood.
4. Remove the existing hood air scoop nuts (3). Retain nuts for installation.
5. Release the single rear center retainer and remove the hood air scoop (4) from the hood.

Installation Procedure

1. Using a 50/50 solution by volume of isopropyl alcohol and clean drinkable water, clean the area where the hood air scoop will be installed.
2. Dry the area with a clean lint-free towel.

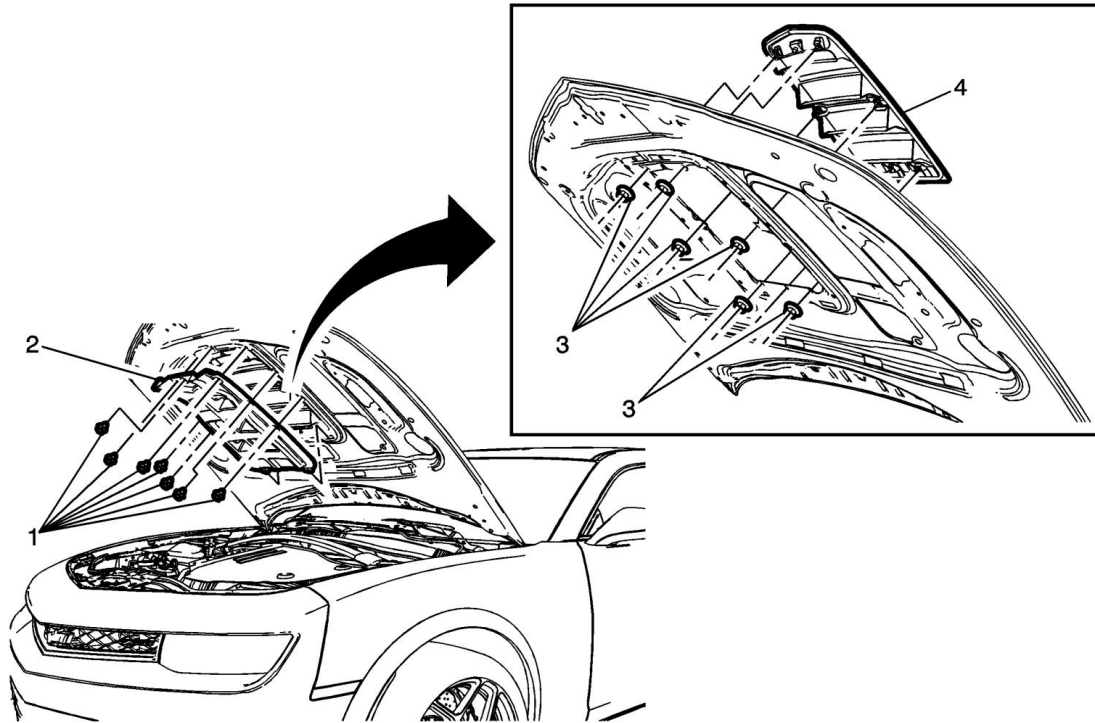

3. Position the hood air scoop forward alignment pin to the hole in the hood to align the hood air scoop (4) and seat the rear retainer.

Caution: Use the correct fastener in the correct location. Replacement fasteners must be the correct part number for that application. Fasteners requiring replacement or fasteners requiring the use of thread locking compound or sealant are identified in the service procedure. Do not use paints, lubricants, or corrosion inhibitors on fasteners or fastener joint surfaces unless specified. These coatings affect fastener torque and joint clamping force and may damage the fastener. Use the correct tightening sequence and specifications when installing fasteners in order to avoid damage to parts and systems.

4. Install the previously removed nuts (3). Tighten the nuts to 4 N.m (35 lb in).
5. Install hood air scoop deflector (2) to the underside of hood using the previously removed push-in retainers (1).
6. Close the hood.