




Front Fender Mud and Rear Mud Flap Package Installation




Installation Instructions Part Number

42341808



Kit Contents Front

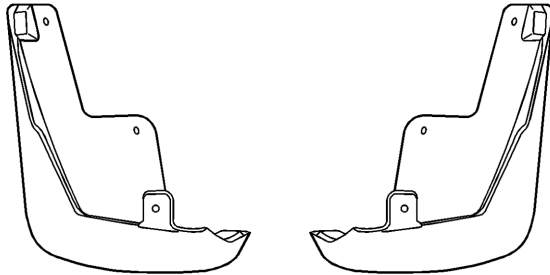




Kit Contents Rear

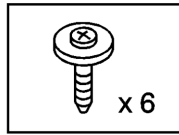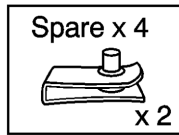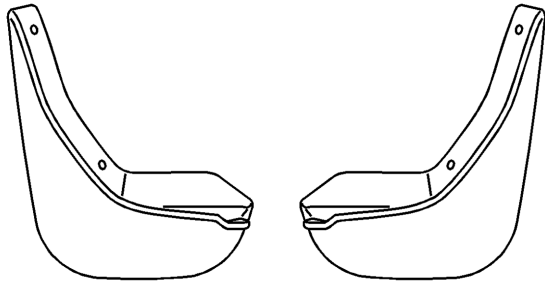



Tools Required

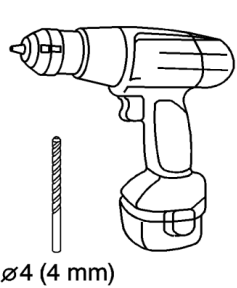




Procedure Front

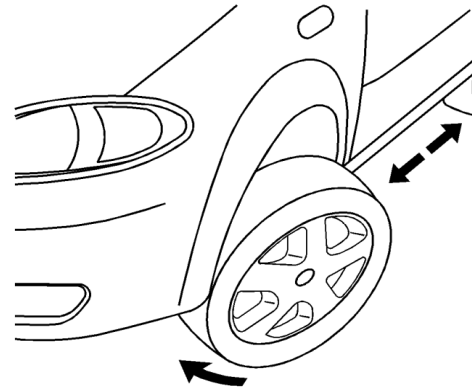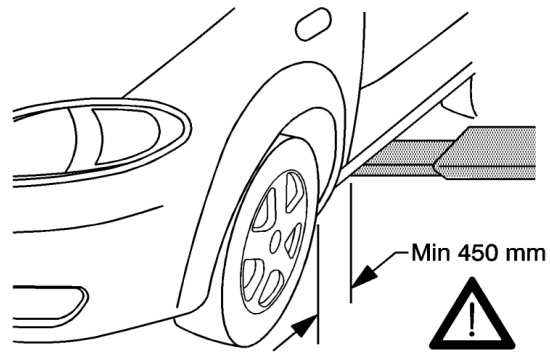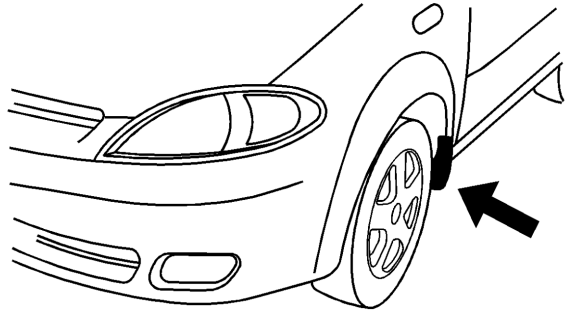


2

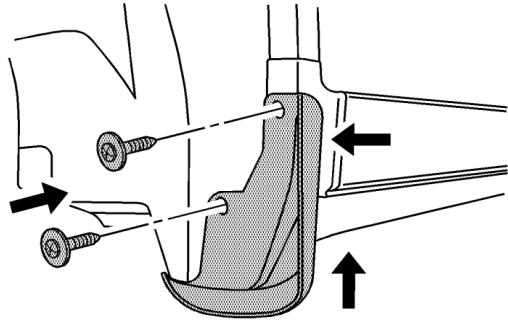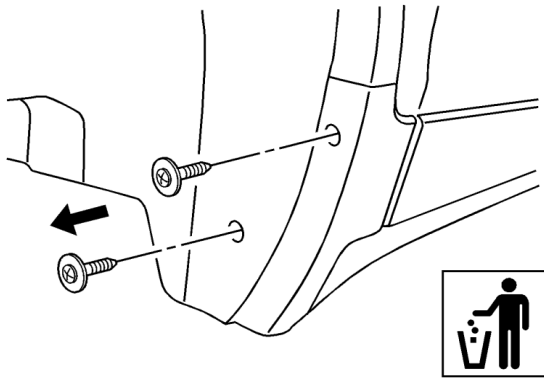






3

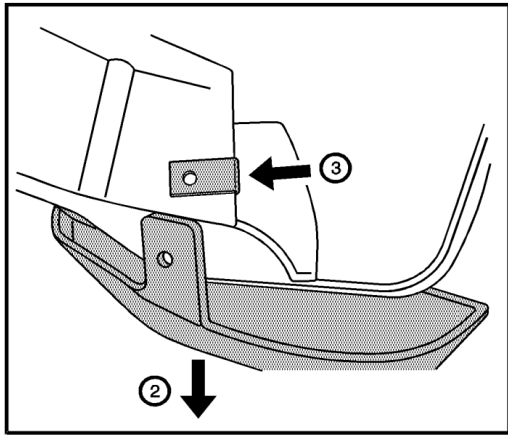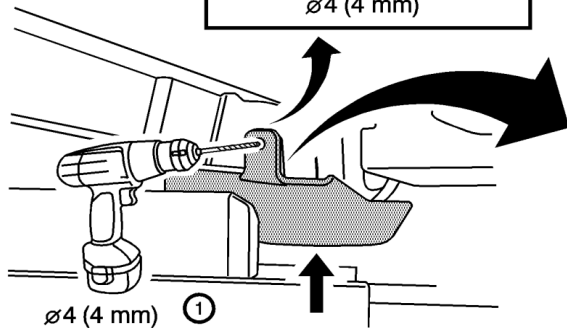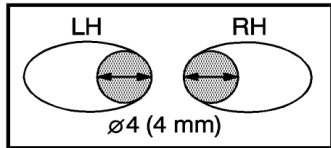

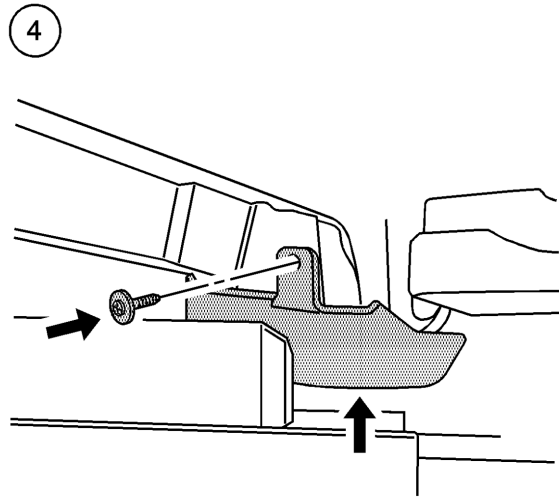


Procedure Rear

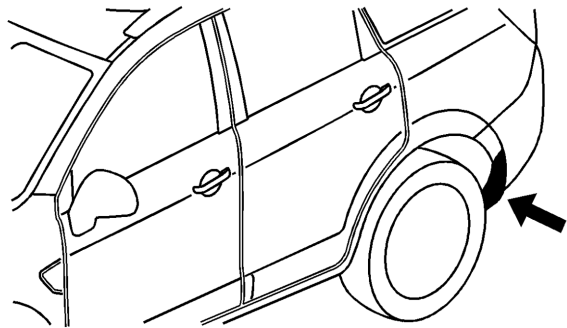


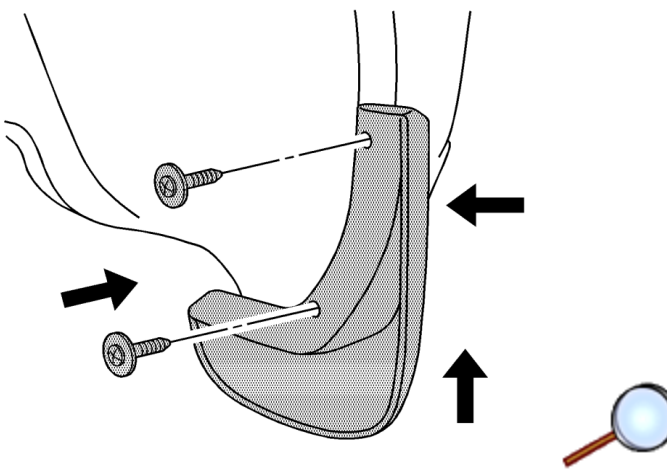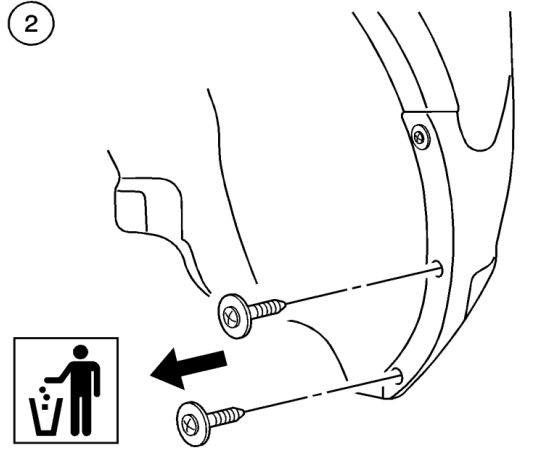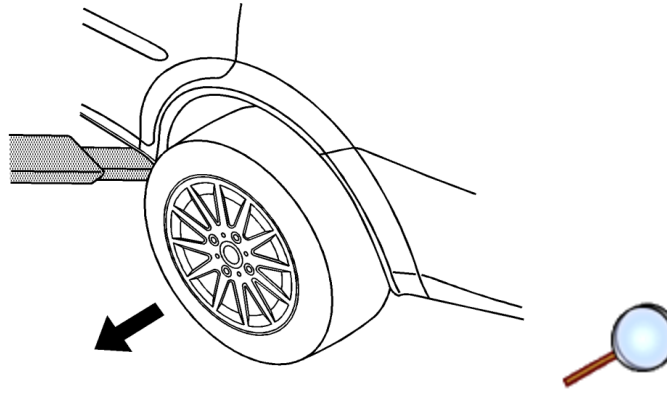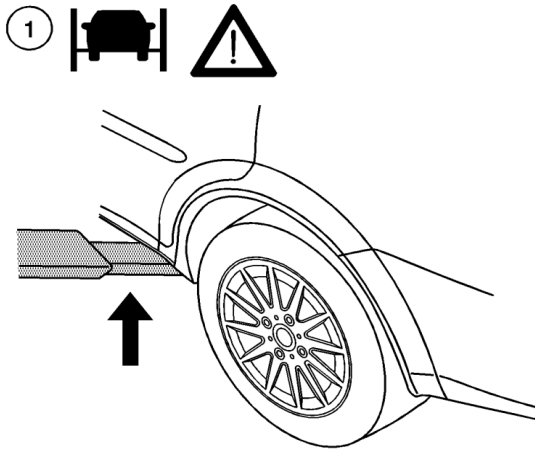

3


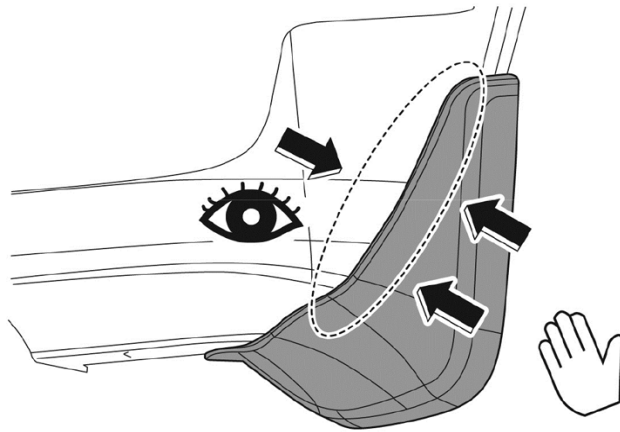


4

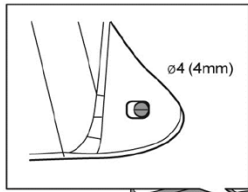

1

ø4 (4mm)

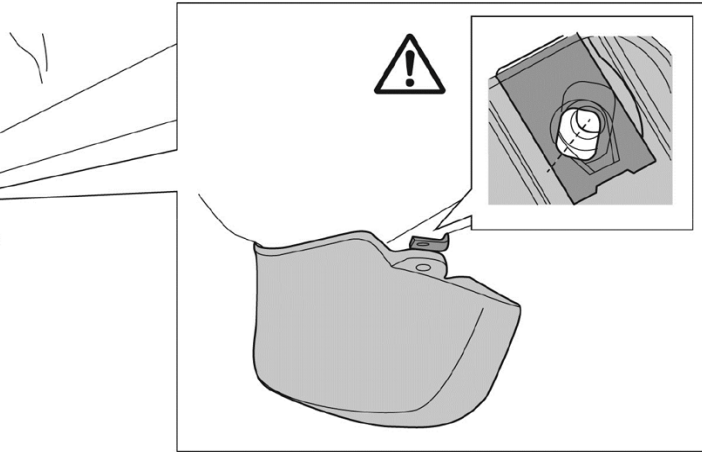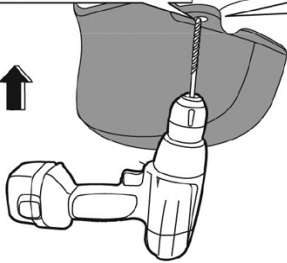

5

