


## Front Fender Mud Flap Package Installation (VE & VF Only)

### TOOLS REQUIRED:

Phillips head screwdriver, 8mm Drill bit and Power drill.

**NOTE:** Sports mudflap shown, Omega/Evoke & Caprice similar.

### [FITTING INSTRUCTIONS: FRONT MUDFLAPS](#)

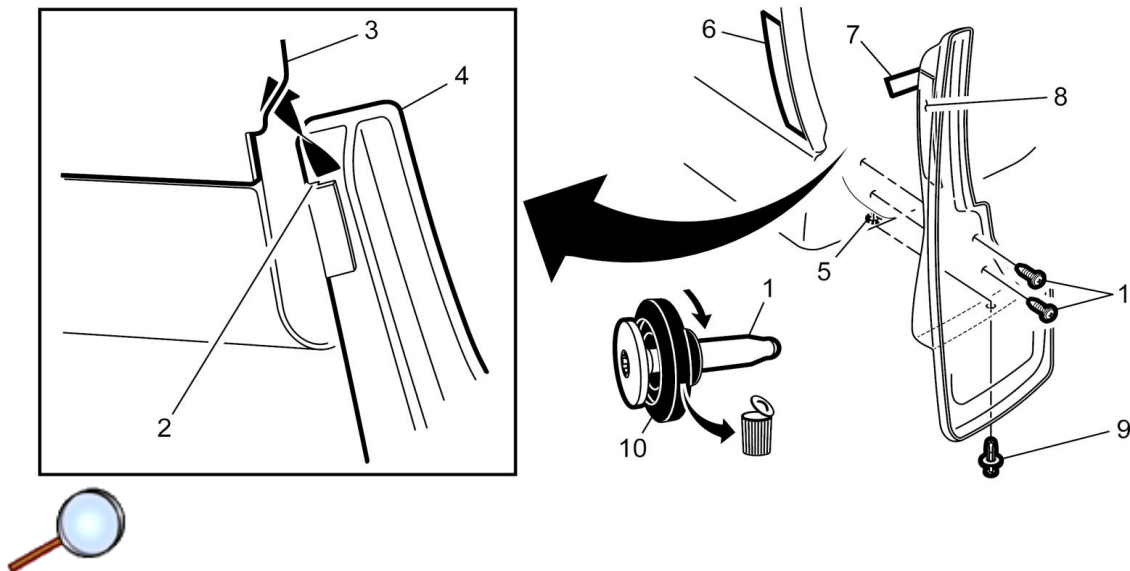

1. Ensure the area around the wheel arch is clean before fitting the mudflaps.
  2. Turn the steering wheel to full lock to assist with access. Remove the existing screws (1) from inside the wheel arch (retain screws).
- Note:**
- For Kit numbers 92254225, 92179316, 92179318, 92184482, retain the fixing screws for re-use.
  - For Kit numbers 92277966, 92277968, remove and discard plastic washers (10) from fixing screws (1) and retain fixing screws for reuse.
3. Use an isopropyl alcohol cleaning wipe to thoroughly clean the area where the double sided tape will adhere to (6). Retain the cleaning wipe for the other side.
  4. Fold the backing paper tab (7) on the double sided tape (8) back so that the backing paper can be removed once the mudflap has been positioned correctly.
  5. Align the top mudflap fixing (2) with the lead in gap (3) at the base of the sheet metal of the wheel arch, angle the mudflap and slide the mudflap (4) up onto the steel lip of the wheel arch, as you slide the mudflap onto the lip rotate the mudflap until the mudflap is positioned against the profile of the wheel arch and side sill.
  6. Use the screws (1) to fix the mudflap in position.
  7. From under the vehicle use the mudflap as a template and drill an 8mm hole (5) in the base of the side skirt. Fit the scrivet (9) supplied.
  8. Remove the backing paper from the double side tape and apply pressure to the tape for 10 seconds to ensure permanent adhesion.

9. Repeat all steps on the other side of the vehicle.
10. Place the fitting instructions in the glovebox of the vehicle.

## Front Fender Mud Flap Package Installation

PARTS LIST		
PART No	DESCRIPTION	QUANTITY
92179316 92179318 92184482 92254225	MUDFLAP KIT (VE ONLY)	1
92277966 92277968	MUDFLAP KIT (VF ONLY)	1
	MUDFLAP - FRONT (RHS)	1
	MUDFLAP - FRONT (LHS)	1
	SMALL PARTS KIT	1
92420339	FITTING INSTRUCTIONS	1