

Body Stripe Package Installation (Single Upper and Side Stripe)

[Installation Instructions Part Number](#)

92215990

Kit Contents

Qty	Description
1	Camaro Stripe Kit
1	Installation Instruction Sheet

[Procedure](#)


Preparation - Before Installation

1. After opening the kit, check to see if any parts are missing (7 parts full stripe set and 4 parts side stripe set) and that the product is not damaged.
2. This product should be installed with proper installation tools.
3. Install this product while observing all warnings and precautions stated in this instruction booklet.

Note: Begin with a thoroughly washed vehicle.

4. Ambient temperature of stripes and vehicle must be 70°F to 80°F at the time of installation and for two hours after.
5. Do not high pressure wash for twenty-four hours. Installation Instructions.
6. To ensure bubble-free application, put one or two tiny drops of liquid "Joy" brand detergent into a trigger-type plastic spray bottle. Set nozzle for "Fine mist". Thoroughly saturate the paint surface where the part is to be applied with the detergent/water solution.


DECKLID

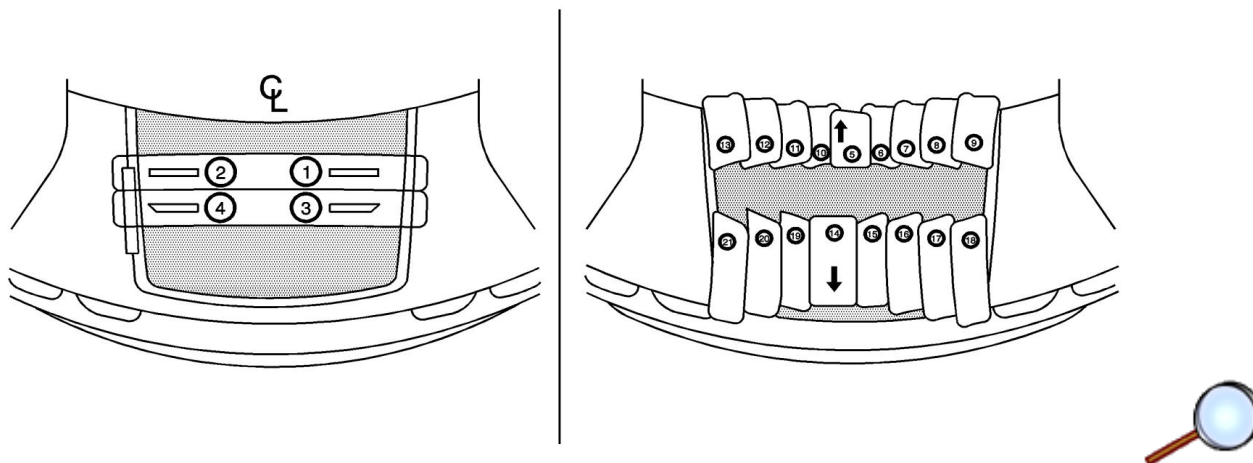

Measure forward edge of the decklid to find center, mark with a grease pencil. Position the V slot in the center strip with the center of the decklid. With fore/aft adjustment, position the front edge of the decklid with the two V slots and tape in position. Use masking tape to create a "hinge" flip


over, remove liner, spray solution on adhesive side and decklid, flip over, lay flat into position and spray with solution. Begin Squeegee sequence as shown. Squeegee again at panel wrap area, working radius beginning to end, remove premask at 180 degrees.

HOOD STRIPE

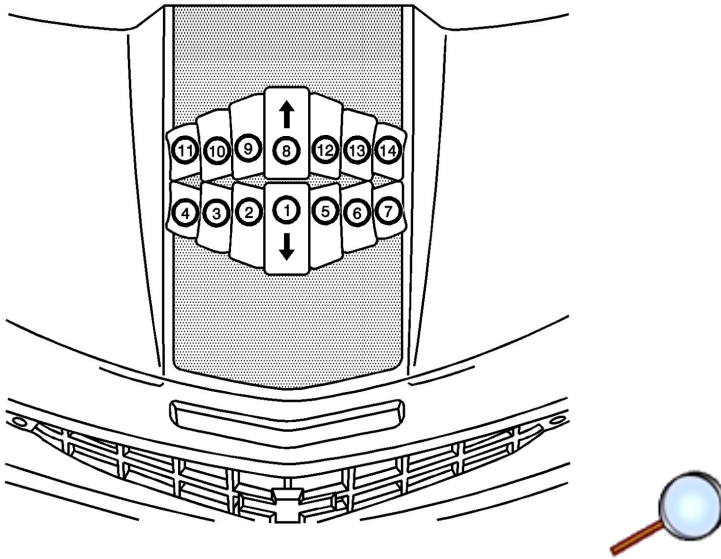

1. Find the center point of the hood dome and mark with a grease pencil.
2. Lay the decal on a flat surface and remove the release liner.
3. Spray both the adhesive side of the decal and the hood dome with solution until thoroughly saturated. Position stripe on the hood by sliding the stripe around using the V slot in the premask to align with the center line and the two V slots on the side of the stripe align to the rear edge of the hood. Once aligned squeegee from the center outward to secure the stripe in place.
4. Remove the premask at 180 degrees. Re-squeegee all edges and use a heat gun to properly wrap the remaining.


FRONT FENDER STRIPES

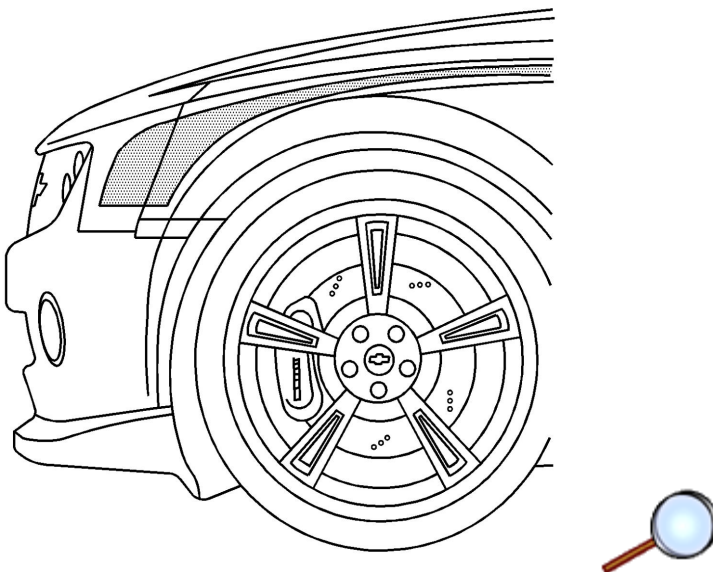

1. Lay the decal on a flat surface and remove the release liner.

2. Spray the adhesive side of the decal and the fender with solution. Position the decal with the center of the notch and perforation between the fascia and front fender panel edges. Ensure the decal follows the contour of the top edge of the fender.
3. Once aligned properly, squeegee from the center outward to secure the decal in place.
4. Remove the premask at 180 degrees. Re-squeegee all edges and use a heat gun to properly wrap the remaining decal over the rearward fender edge.

DOOR STRIPE

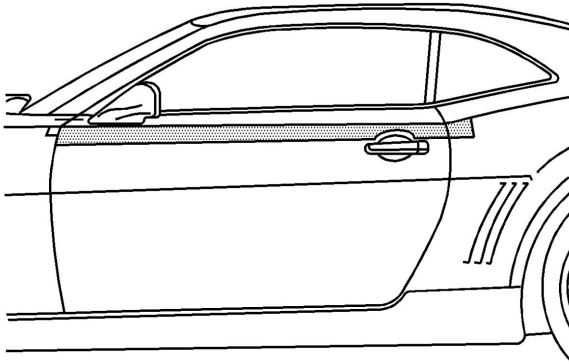

1. Lay the decal on a flat surface and remove the release liner.
2. Spray the adhesive side of the decal and the door with solution. Position the decal by aligning the premask over the previously installed fender stripe and the top edge of the door.
3. Once aligned properly, squeegee from the center outward to secure the decal in place.
4. Remove the premask at 180 degrees. Re-squeegee all edges and use a heat gun to properly wrap the remaining decal over the leading door edge.